

# MODEL : 7113T(DE85)EXT.

# ASSEMBLY INSTRUCTION

Read this instruction carefully. Remove all wrapping material, staples and straps from the carton. See hardware and furniture part list For guidance. Be sure you have all wooden furniture parts on a clean and flat soft surface, such as a carpet or rug, to prevent from being scratched. Follow the figure to start assembling.

### CAUTION :

1. Do not FULLY - TIGHTEN the nut or screw untill all is ready to assemble.
2. Do not OVER - TIGHTEN the nut or screw to avoid causing damages to the thread.
3. Keep all hardware part out reach of children.

NO	DESCRIPTION	QTY
1	JCBC M6 x 50mm	16 PCS
2	HEX.NUT 5 / 16"	12 PCS
3	FLAT WASHER 5 / 16"	12 PCS
4	ADJUSTER LEGS	4 PCS
5	SPRNG WASHER 6 / 13"	16 PCS
6	M4 ALLEN KEY	1 PC
7	SPANNER	1 PC
8	SPRNG WASHER 5 / 16" - USE TO PART LIST 'D'	4 PCS

NO	PART LIST	QTY
A	TABLE TOP with EXTENSION	1 SET
B	PEDESTAL TABLE CENTER	1 PC
C	PEDESTAL LEGS	4 PCS
D	WOOD PANEL	1 PC
E	SUPPORT WOOD PANEL	2 PCS

