


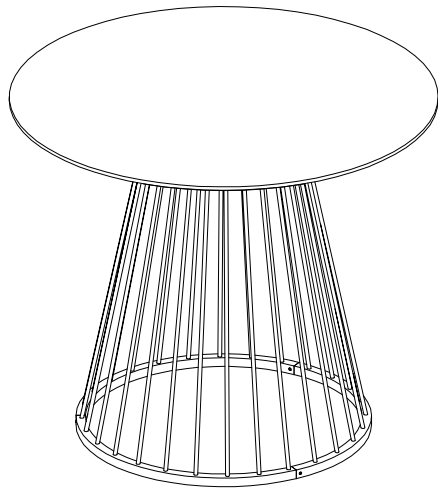





A		x6
B		x6
C		x6


Finish



FDT7012


 x2	 0:20	 D x1
--	--	--

Step:1

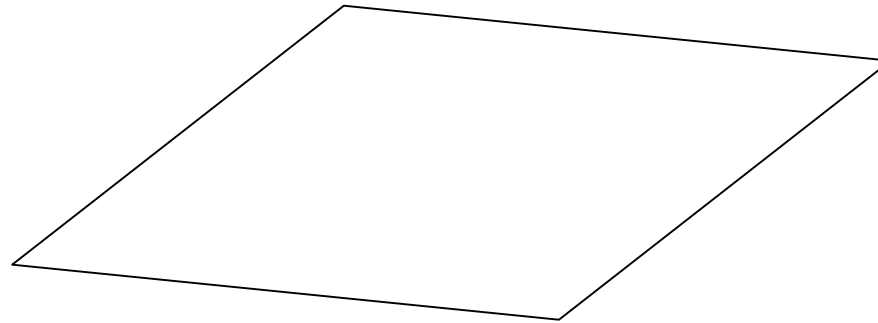


put the carton on the floor.


Step:2

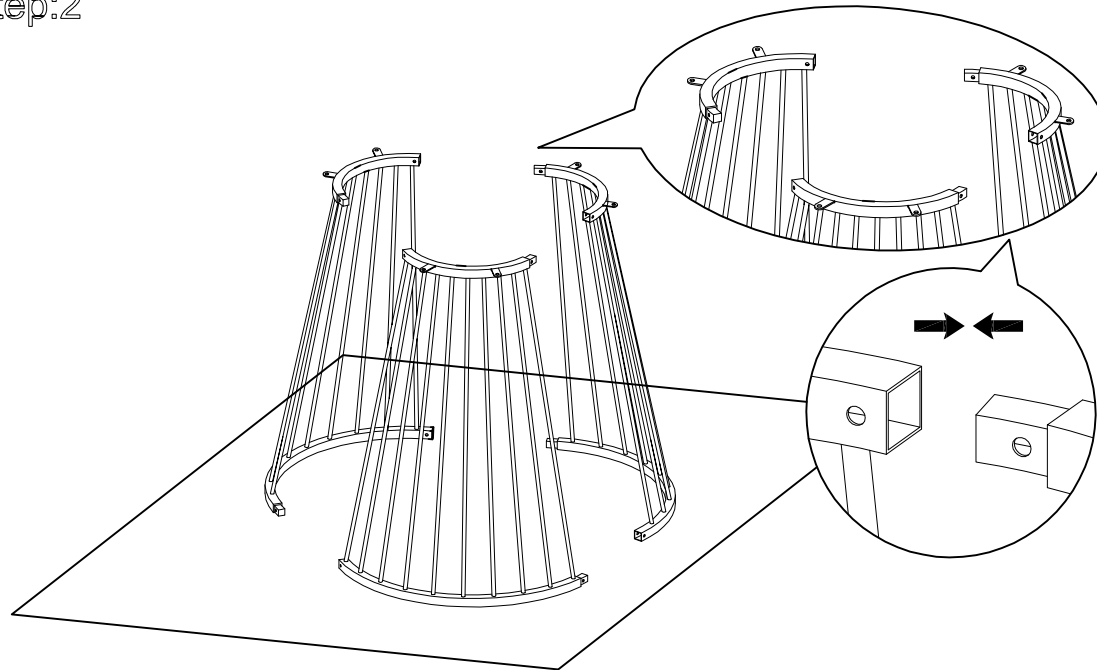

Step:3

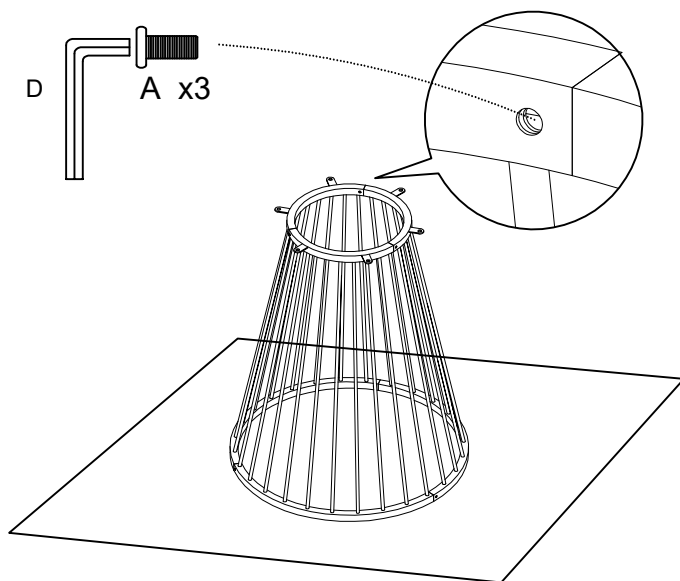

Step:4

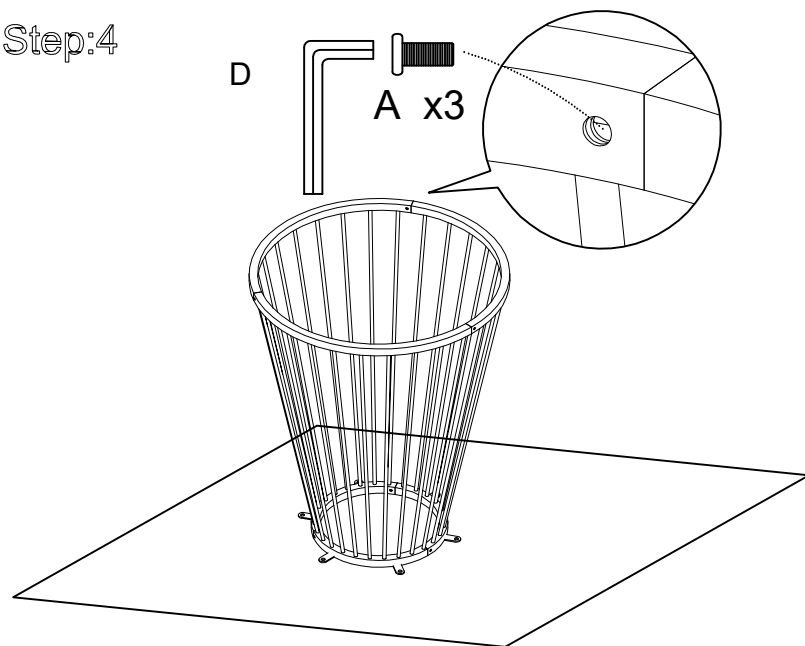

Step:5

